

Rubenstein Library HoverCam Quick Start guide – PC users

Installing the Hovercam software for the first time (later usage won't require install)

***If the below instructions fail, go to Hovercam.com/support/downloads.*

***Installing software on a private computer may require the user to have admin privileges*

***Video tutorial at <https://thehovercam.wistia.com/medias/oohxoan44k>*

1. Remove rubberized cover from *Install* port in center of Hovercam base and set aside.




2. Plug the orange cable into *Install* port (you may need to first remove cable from SB port to right of *Install* port).




3. Plug USB end of orange cable into a USB port on the computer.




4. Open This PC; navigate to view of computer's drives.

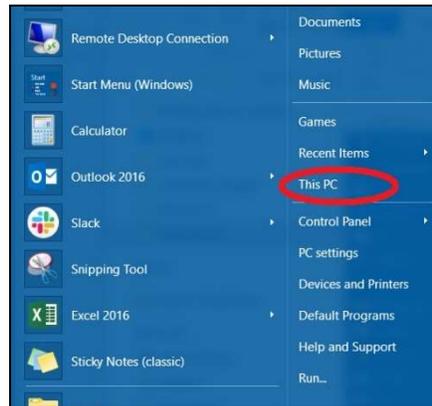

5. Find the drive titled UDISK D and open it.

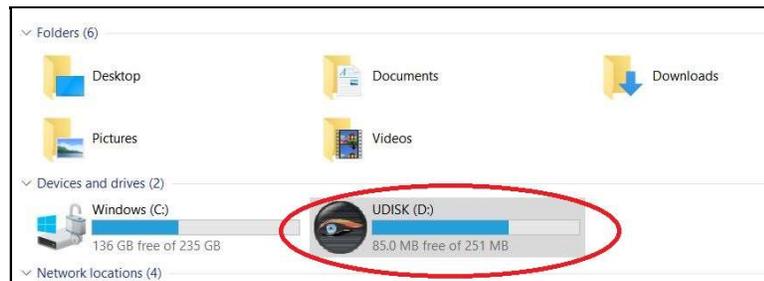


6. Double-click on **Setup** to open installation dialog.

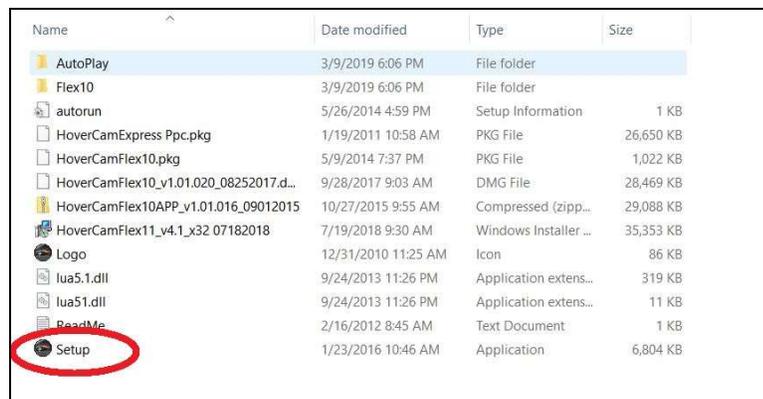

7. If a dialog box appears, select **Allow**.
8. When the Software Installation window opens, select **HoverCam Flex11**.



9. When the Setup Wizard window opens, select **Next**.
10. When the Select Installation Folder window opens, select **Next**.
11. When the Confirm Installation window opens, select **Next**.
12. When User Account Control window opens, enter admin login info, and select **Yes**.

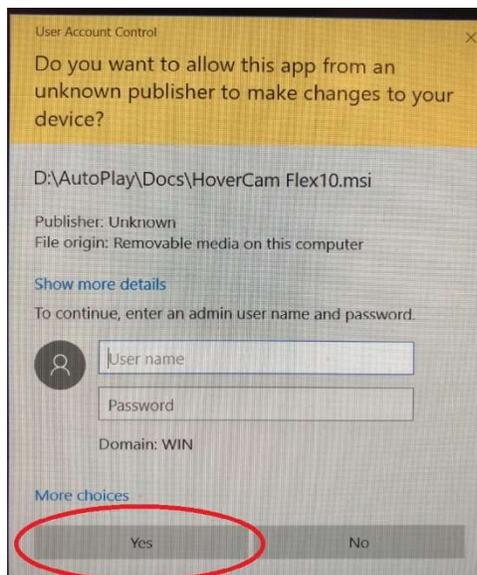

13. When the Installation Complete window opens, select **Close**.
14. If the Software Installation window is still open, select **Exit**.
15. Remove orange cable from camera's *Install* port and move to USB port.
16. Replace rubberized cover in *Install* port.